


OPERATING INSTRUCTIONS for Wafer Holder PIN-ADAPTION

Wafer:

- Before first use, the positioning pins (PTFE-pins) possibly have to be adapted to the scope of the wafer. Adapt the notches of the pins carefully to the wafer scope with a sharp blade.

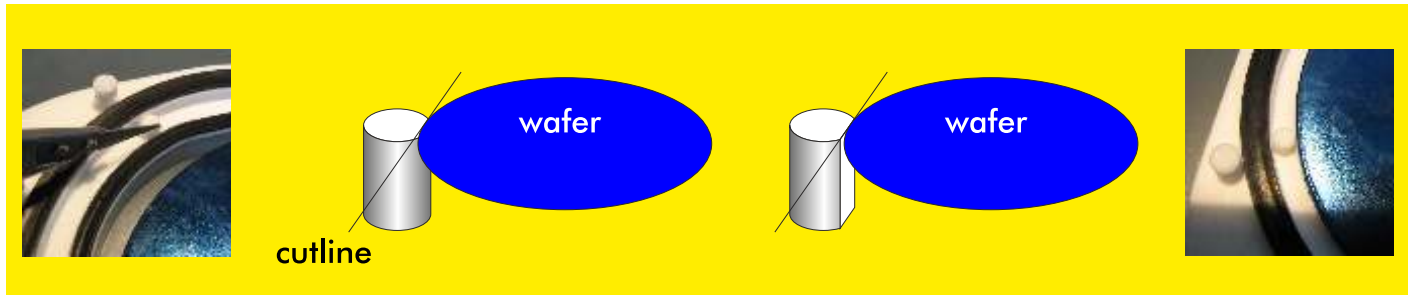

- Do not use wafers which show markings, qualifications or similar unevenness within the contact-area of the vacuum-sealing lips. In case of non-observance, leakages can occur during the process.

Cleaning:

- Clean vacuum sealing lips and cover with detergent and DI water. Don't use dissolver!